

MITYLITE®

Cleaning & Care Instructions MAGNATTACH® Portable Dance Floor



Cleaning & Care Instructions


The Magnattach portable dance floor features a durable **Wilsonart® laminate surface**. To ensure years of reliable use, please follow the instructions below when caring for your dance floor.

Daily Maintenance

For daily cleaning, use a standard cleaning solution or dishwashing liquid mixed with warm water and a microfiber cloth. Apply the mixture to the dance floor surface using the cloth, which should be damp, but not dripping wet. Afterward, rinse thoroughly with warm water and then wipe dry.

Recommended cleaning solutions:

- Windex
- Glass Plus
- Fantastik
- Mr. Clean
- Formula 409
- Purell Multi-Surface
- Isopropyl Alcohol (Isopropanol)

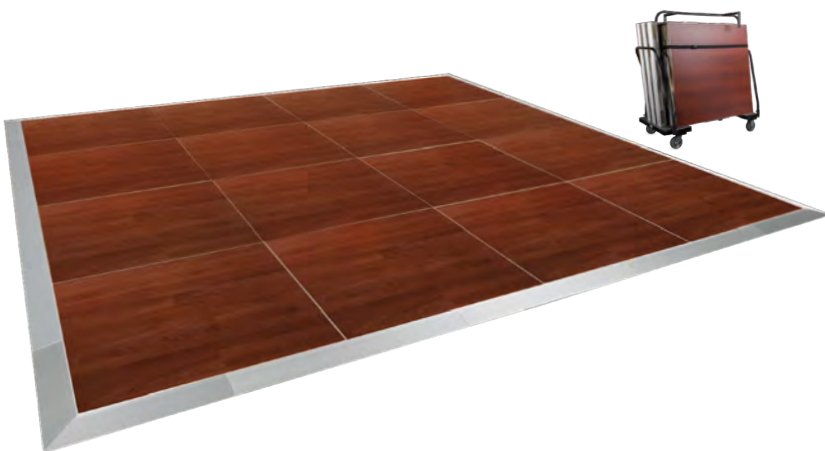

MITYLITE®


Learn more at mitylite.com/resources

To Disinfect


Alcohol and bleach are acceptable chemical disinfectants to use **if applied correctly**. As with any other disinfectants, soiled surfaces need to be cleaned with water and detergent first. Then, apply the bleach or alcohol solution to disinfect.

When using bleach:

- When not used properly, bleach can be harmful to the user and cause long-term damage to surfaces
- Prolonged exposure of the laminate surface to bleach will cause discoloration
- Follow the manufacturer's guidelines and safety precautions

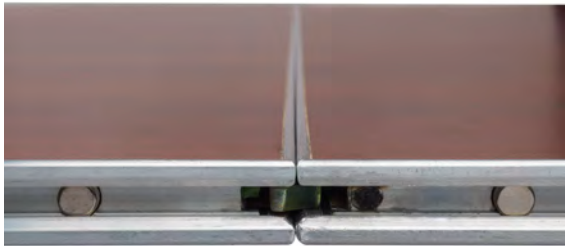

Magnattach panel cross-section

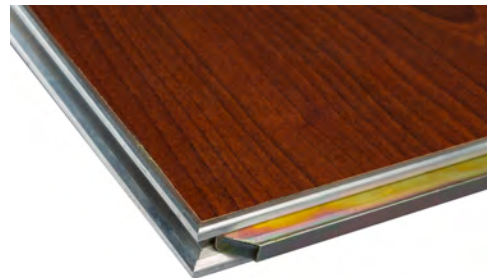

Cleaners with the following active ingredients in various mix ratios and solutions **pose a threat to any surface and cause irreparable damage:**

- Peroxide(s)
- Strong acids (phosphoric acid is often used, very low pH values)
- Hydrochloric acid
- Sulfuric acid
- Hydrofluoric acid
- Phosphoric acid
- Sodium hydroxide



As in the case of all cleaners, exposure time is the key. Often surface damage is due to poor removal of the cleaning agent (spills, drops, etc. that are not removed). Prolonged exposure, chemical dilutions, and frequency of cleaners, disinfectants, and/or sanitizers used on the surface can cause degradation and/or discoloration. ***It is recommended to test a cleaner on a small area of the surface first.***

If you are unsure whether a cleaner, detergent, sanitizer, or chemical can be used on the dance floor, contact the **Wilsonart Technical Services Team at 1.800-433-3222.**



WARNINGS:

- **Never** use mechanical floor cleaning equipment, abrasive cleaners, steel wool, pumice stone, or scouring pads on the dance floor panels
- **Never** use wax, sand, lacquer, or other topical finish treatments
- **Never** expose the floor to standing water